




For CSR and CSR ELITE Pedals.


Put your wheel on the main plate and drive four bolts to fix it firmly.

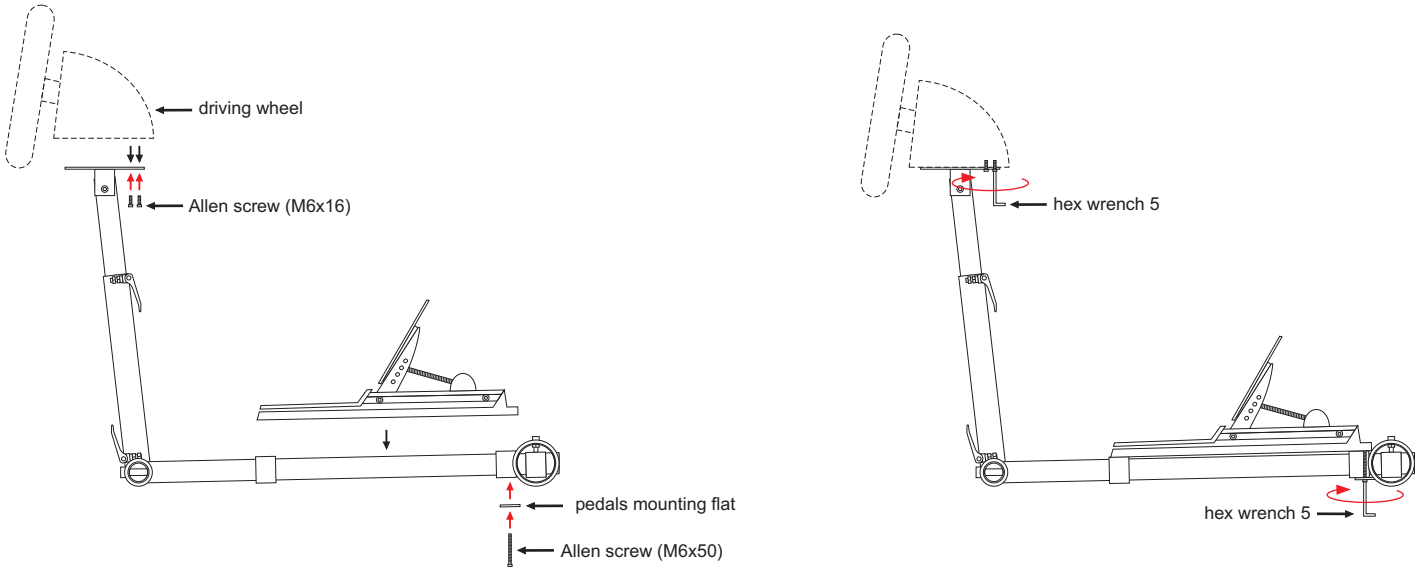

Put your **CSR** pedals on the stand.

Next drive 2 Allen screws (M6x50) to connect the pedals with the pedals mounting flat from the bottom.

**Tightening the screws too much can cause damage to the wheel and pedals.**

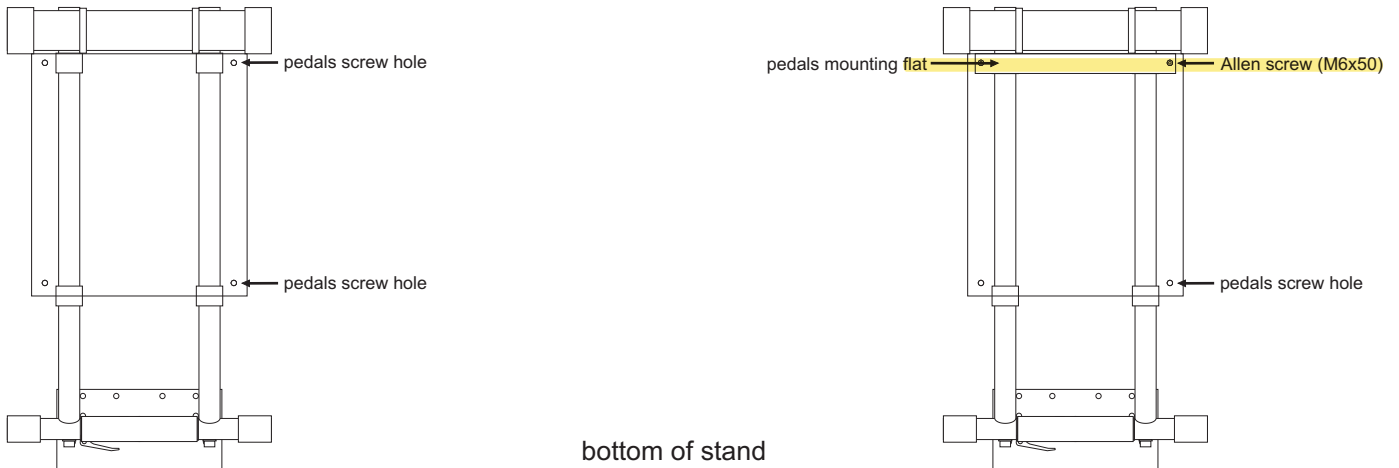

PLEASE ALSO VISIT CONSTRUCTOR'S TIPS: <http://www.wheelstandpro.com/contips.html>

For details please visit our website

[www.wheelstandpro.us](http://www.wheelstandpro.us)

