




For CSR and CSR ELITE Pedals.


Put your wheel on the main plate and drive four bolts to fix it firmly.

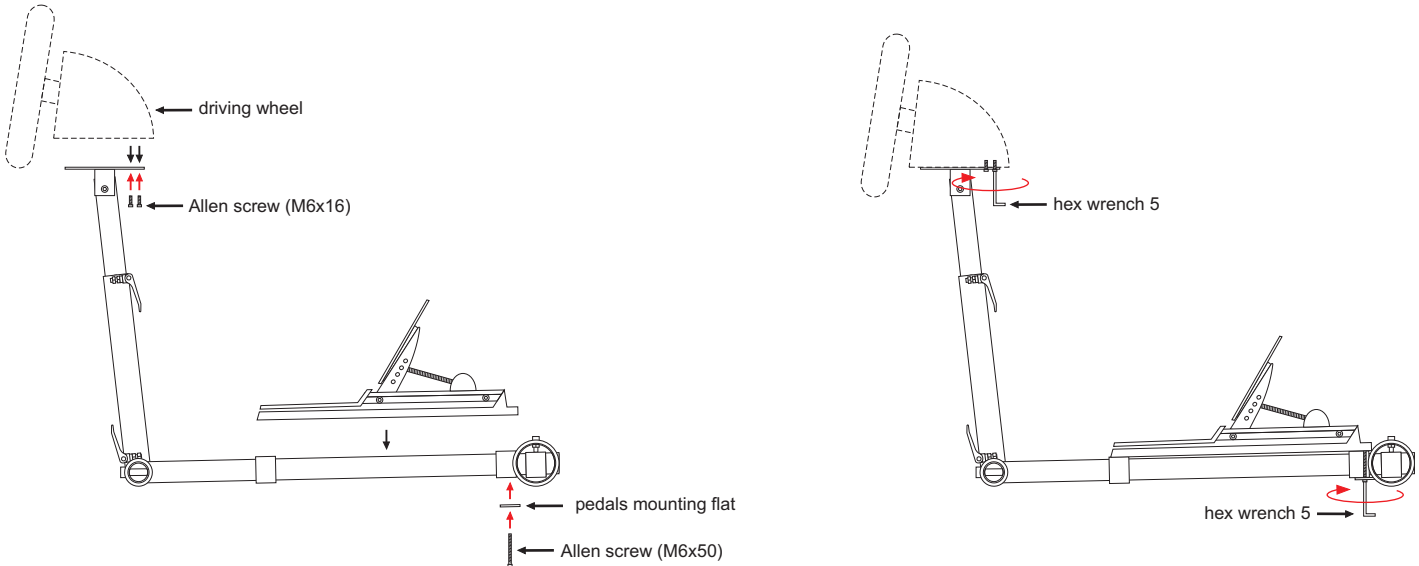

Put your **CSR** pedals on the stand.

Next drive 2 Allen screws (M6x50) to connect the pedals with the pedals mounting flat from the bottom.

Tightening the screws too much can cause damage to the wheel and pedals.

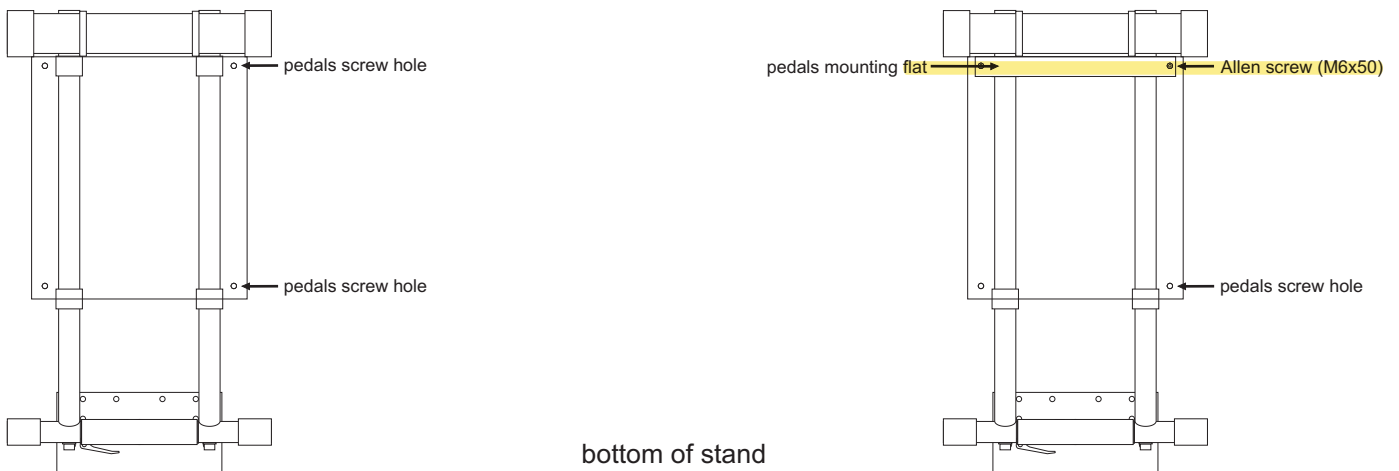

PLEASE ALSO VISIT CONSTRUCTOR'S TIPS: <http://www.wheelstandpro.com/contips.html>

For details please visit our website

www.wheelstandpro.us

